



HTC Desire V Vibration Motor Replacement

This guide will outline how to remove and replace the vibration motor of the HTC Desire V smartphone

Written By: William McCusker



INTRODUCTION

This guide will outline how to remove and replace the vibration motor of the HTC Desire V smartphone.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)



PARTS:

- [HTC Desire V Vibration Motor](#) (1)

Step 1 — Battery




- Gently pry back cover away from phone
- If you are having difficulty you may need to use a Spudger or plastic opener

Step 2



- Lever the battery out from the bottom end first.
- If you have trouble you can use the opening tools or the spudger again

Step 3 — Midframe

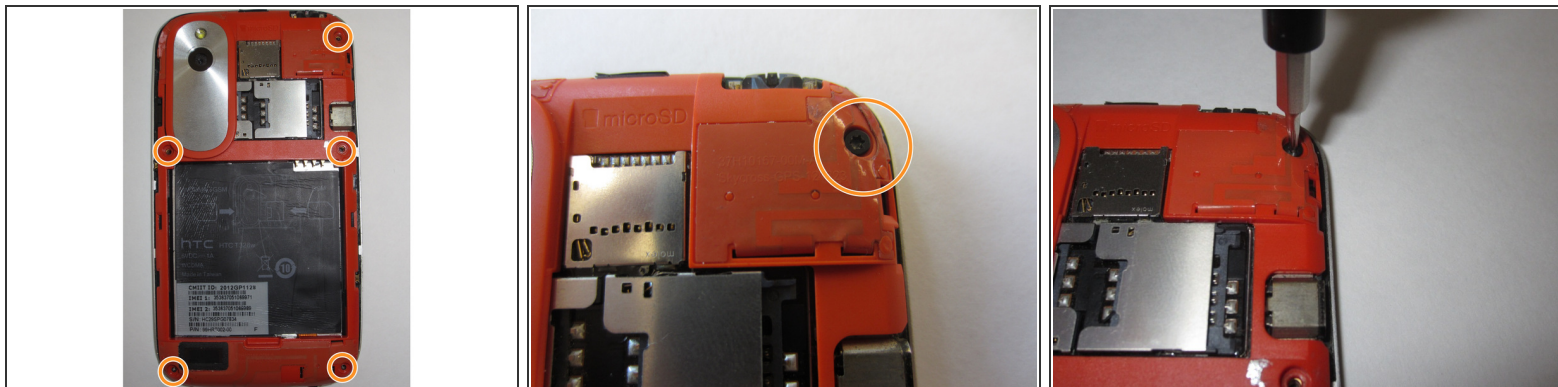


- Unscrew and remove five 3.0 mm black torx screws at the positions circled in orange.
- Use a Torx T5 screwdriver

Step 4




- Using an opening tool or a spudger, gently remove the plastic backing

Step 5 — Vibration Motor

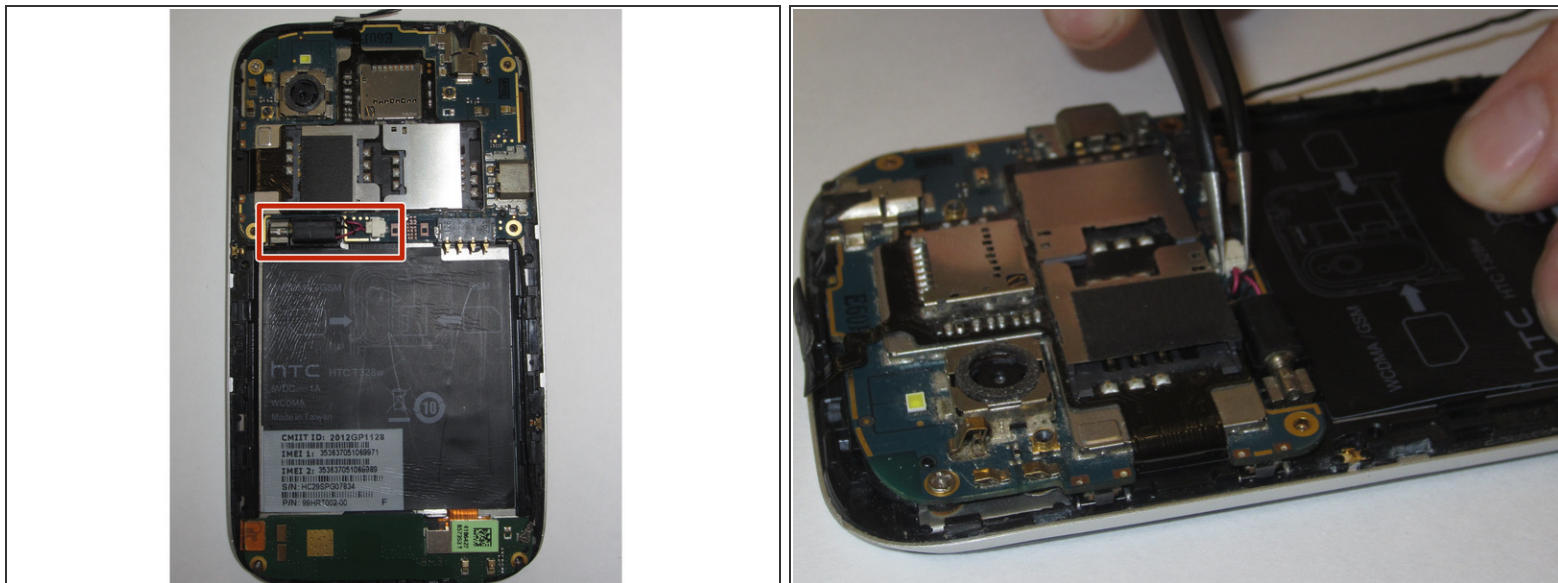

- Unplug the vibration motor shown from the white plug on the motherboard
- You will probably need tweezers to do this

Step 6

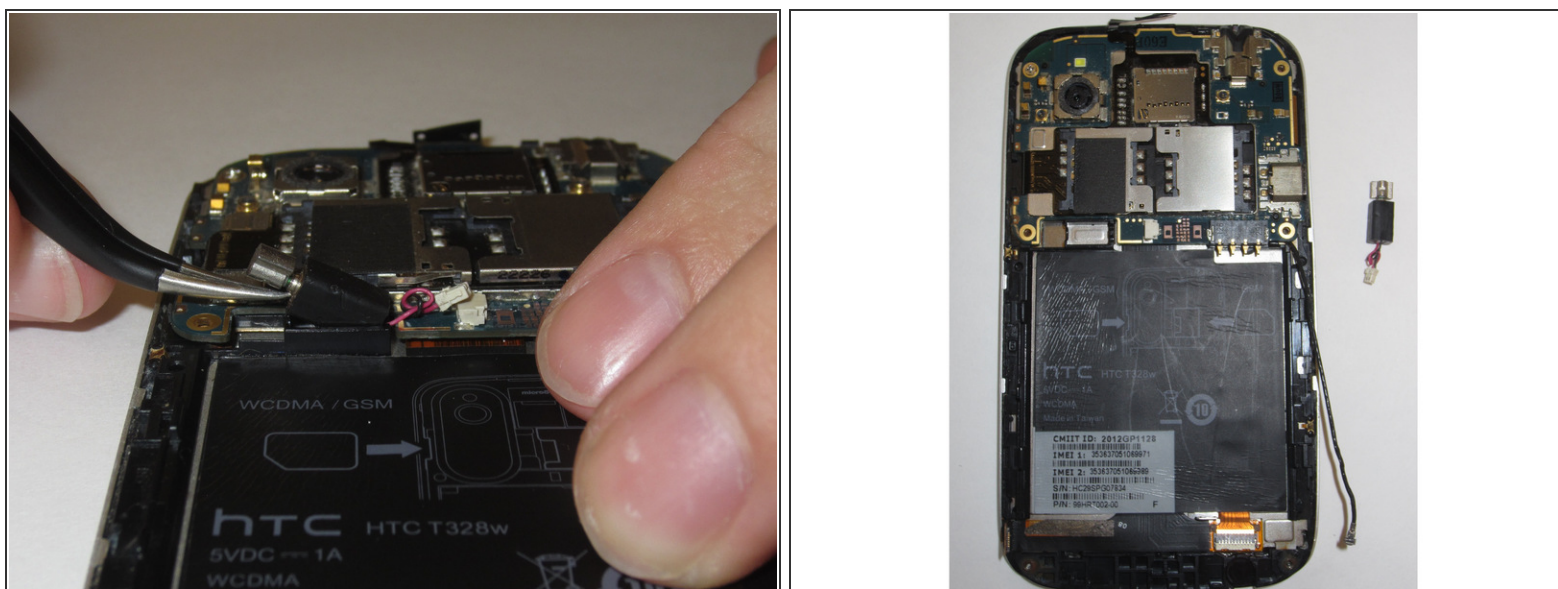

- Gently remove the motor from its housing in the phone's chassis
- The easiest way to do this is to lever the motor out by its rotating end using the tweezers

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-14 09:20:04 PM.